


TB_PROD Front Panel (rear view)

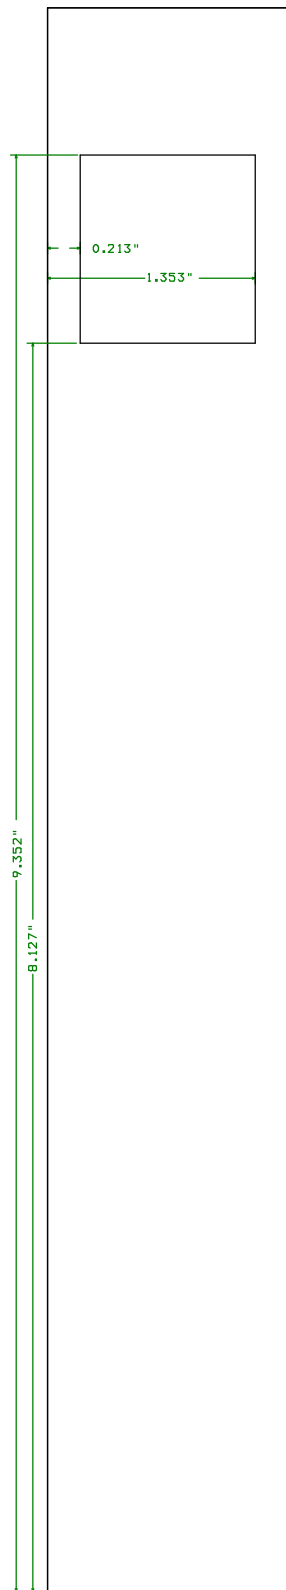

A recess must be milled in the back side of of the panel to a depth of 0.040" and in accordance with the dimensions to the right.

Corner radii are to be kept to a minimum and should be discussed with Neal Wilcer

If the depth of 0.040" cannot be achieved, contact Neal Wilcer at 630-840-2749